

Mini Spotlight

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Spotlight creates a colorful light show! It comes with red, yellow, blue, and green lenses so you can set the mood at a dance, a party, or just about anywhere.

For added special effects, use the Spotlight with the 8-Inch Mirror Ball with Motor (RadioShack Cat. No. 42-3046). When the Spotlight highlights the spinning mirror ball, the ball reflects its dazzling, colorful light around the room for a party atmosphere.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

INSTALLATION

 
Selecting a Mounting Location

You can mount the Spotlight on a floor, table top, or ceiling. Before you mount the Spotlight, select a location that is:

- Sturdy enough to withstand the weight of the Spotlight
- Out of the way but within arm's reach, so you can operate it easily
- Close enough to an AC outlet to use the attached 6-foot power cord

Warning: Injury to persons and damage to the Spotlight or mounting surface could result if the lamp is pulled from the surface. To reduce the likelihood of such injury or damage, mount it only on a stable and sturdy surface.

HANGING THE SPOT LIGHT

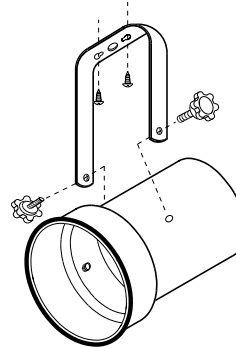


You can hang the Spotlight on a selected location using the supplied mounting bracket as follows.

 **RadioShack®**
www.radioshack.com™

© 2000 Tandy Corporation. All Rights Reserved.
RadioShack, RadioShack.com, and Adaptaplug are trademarks
used by Tandy Corporation.

1. Loosen the two thumb screws on the Spotlight's housing and remove the Spotlight's mounting bracket.
2. Use the bracket as a template to mark the locations for the two mounting screws.
3. Drill two $\frac{1}{16}$ -inch (1.6 mm) holes into the mounting location surface (for example, a wood stud). Use a Phillips screwdriver and the two supplied wood screws to mount the bracket in the selected location. Tighten the screws securely.
4. Tighten the thumb screws to securely reattach the Spotlight to the bracket.

 Desktop Placement

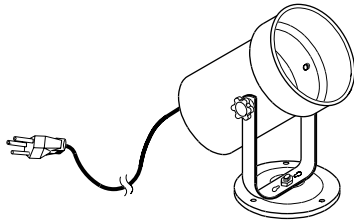

You can place the Spotlight on a desk or level surface using the supplied stand as follows.

1. Place the Spotlight's mounting bracket's center hole on the mounting stand's center hole, then insert the supplied mounting stand's bolt from the bottom into both holes.
2. Rotate the top nut on the bolt to lock the Spotlight tightly onto the stand.
3. Place the Spotlight in the desired location.

OPERATION

Plug the power cord into a standard AC outlet. The Spotlight lights.

If you use a mirror ball, aim the Spotlight at it. The mirror ball reflects and spins the colorful beams when it rotates. To get more colorful beams, use more Spotlights with different col-

ored lenses aimed at the mirror ball from different angles.

Note: You might need to adjust the Spotlight's angle to get the best results.

Unplug the Spotlight when you are not using it.

 
Adjusting the Spotlight's Angle

Loosen the two thumb screws on the Spotlight's housing, and adjust the Spotlight to the desired angle. Then tighten the screws.

Warning: The Spotlight's housing gets hot after the light is plugged in. If you need to adjust its angle after it is plugged in, wear a thick glove. Do not touch the Spotlight's housing with your unprotected hand.

Changing the Lens

Your Spotlight comes with four colored lenses – red, green, blue, and yellow.

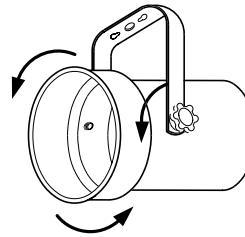

Follow these steps to change the lens:

1. Unplug the Spotlight and let it cool.
2. Turn the lens cap counterclockwise and remove it.
3. Place the desired colored lens over the Spotlight's bulb.
4. Replace the lens cap and turn it clockwise until it is secure.

 
Caution: Do not install two lenses at the same time because the lens closest to the bulb might become deformed due to the bulb's heat.

Replacing the Bulb

Your Spotlight's bulb should last up to 100 hours. If the Spotlight's bulb burns out, you can order a replacement bulb through your local RadioShack store.

Warning: Before replacing the bulb, unplug the Spotlight. Be sure the bulb has cooled down, or wear a thick glove when replacing it.

Caution: Use only a PAR 36 6-volt 30-watt bulb. Using another type and size bulb could damage the bulb or the Spotlight.

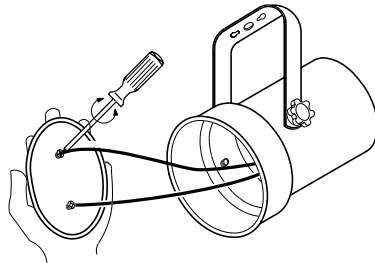

Follow these steps to change the bulb.

1. Turn the lens cap counterclockwise and remove it and the lens.
2. Place the Spotlight with the bulb side down so the bulb falls out.
3. Use a flat-blade screwdriver to loosen the two screws that secure the wire to the bulb's terminal. Remove the old bulb and discard it.
4. Insert the new bulb, then reconnect the two wires to the screws. Tighten the screws securely.
5. Replace the lens and lens cap, then turn the cap clockwise until it is secure.

- Keep the Spotlight dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Use and store the Spotlight only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.
- Keep the Spotlight away from dust and dirt, which can cause premature wear of parts.
- Handle the Spotlight gently and carefully. Dropping it can damage circuit boards and cases and can cause the Spotlight to work improperly.
- Wipe the Spotlight with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the Spotlight.

Modifying or tampering with the Spotlight's internal components can cause a malfunction and might invalidate your warranty. If your Spotlight is not performing as it should, take it to your local RadioShack store for assistance.

CARE AND MAINTENANCE

Your Spotlight is an example of superior design and craftsmanship. The following suggestions will help you care for your Spotlight so you can enjoy it for years.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

42-3062A
05A00
Printed in China